







 



 







 







 

 








Original	Sustituto
	 Power
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Menu / Home
	 Smart / List
	 Up
	 Left
	 OK
	 Right
	 Down
	 AV / Input / RDS
	 TV/Radio /
	 Info / Angle
	 Audio / Lang I/II
	 Vol+

Original	Sustituto
	 CH+ / Page+
	 Vol-
	 Mute / Dimmer
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Back / Return
	 0
	 Exit / Cancel / Clear
	 Shift + Guide / EPG / -/-





Original		Sustituto		Original		Sustituto	
	[≡]/Text		Text / Goto				
	[≡o]		<< / Tune-				
	[≡+]		>> / Tune+				
	[≡x]		<< / Preset-				
	[.≡]/[*]		>> / Preset+				
	[≡♦]/[+]/Wide		Picture / Format				
	[≡?]/PC		Fav / Marker / PC				
	[≡i]/Guide		Guide / EPG / -/--				

