



Original	Sustituto
 Standby	 Power
 1/VCR/DVR	 1
 2/CBL/SAT	 2
 3/Game/TV	 3
 4/AUX	 4
 5/Multi CH	 5
 6/DVD	 6
 7/Tape	 7
 8/Tuner	 8
 9/CD	 9
 +10/10/-/-/D.Tun	 Guide / EPG / -/-
 0/11/Dimmer	 0
 CLR/12/Sleep/Ent	 Fav / Marker / PC
 CH Disc	 CH+ / Page+
 CH Disc Album-	 CH- / Page-
 Vol+	 Vol+
 Vol-	 Vol-

Original	Sustituto
 Up	 Up
 Previous Menu/Muting	 Menu / Home
 Left/Playlist/Cat	 Left
 Enter	 OK
 Right/Playlist/Cat	 Right
 Setup	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Pause/<	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 Stereo	 Sound / Title
 Surround	 Eject / Surround
 < Listening Mode	 Shift + Left
 Listening Mode >	 Shift + Right





 



 



 



 

 



 

 

 



 

 

 

 

 

 

 

 

 

 



 

 

 















Original		Sustituto		Original	Sustituto
 AUDIO TEST TONE	Test Tone/Audio	 LANG I/II AUDIO	Audio / Lang I/II		
 SUBTITLE CH SEL	CH Sel/Subtitle	 EQ SUBTITLE	Subtitle / EQ		
 RANDOM LEVEL-	Random Level-	 Prime Video RANDOM	Blue / Prime Video / Random		
 REPEAT LEVEL+	Repeat Level+	 APP REPEAT	Green / APP / Repeat		
 DISPLAY	Display	 MEDIA DISPLAY	Display / Media		
 L NIGHT DVD	L.Night/DVD	 TIMER SLEEP	Sleep / Timer		
 CINE FLTR HDD	Cine FLTR/HDD	 PROGRAM TV/RADIO	TV/Radio /		





Original	Sustituto	Original	Sustituto
 Standby	 Power	 Enter	 OK
 1/VCR/DVR	 1	 Right/Playlist/Cat	 Right
 2/CBL/SAT	 2	 Setup	 Setup / OPT /
 3/Game/TV	 3	 Down	 Down
 4/AUX	 4	 Return	 Back / Return
 5/Multi CH	 5	 Pause/<	 Pause / Step / Freeze
 6/DVD	 6	 Play	 Play / Slow
 7/Tape	 7	 Stop	 Stop / Hold
 8/Tuner	 8	 <<	 << / Tune-
 9/CD	 9	 >>	 >> / Tune+
 +10/10/-/-/D.Tun	 Guide / EPG / -/-	  <<	  << / Preset-
 0/11/Dimmer	 0	 >>	 >>  / Preset+
 CLR/12/Sleep/Ent	 Fav / Marker / PC	 Stereo	 Sound / Title
 Guide/Top	 D.Menu / Top	 Surround	 Eject / Surround
 Up	 Up	 < Listening Mode	 CH- / Page-
 Previous Menu/Muting	 Menu / Home	 Listening Mode >	 CH+ / Page+
 Left/Playlist/Cat	 Left	 Test Tone/Audio	 Audio / Lang I/II





Original	Sustituto	Original	Sustituto
CH Sel/Subtitle	Smart / List		
Level-/Random	Blue / Prime Video / Random		
Level+/Repeat	Green / APP / Repeat		
Display	Display / Media		
Play Mode VCR	AV / Input / RDS		
L.Night/DVD	Sleep / Timer		
Cine FLTR/HDD	TV/Radio /		





Original	Sustituto
Standby	Power
1/VCR/DVR	1
2/CBL/SAT	2
3/Game/TV	3
4/AUX	4
5/Multi CH	5
6/DVD	6
7/Tape	7
8/Tuner	8
9/CD	9
+10/10/-/-/D.Tun	Guide / EPG / -/-
0/11/Dimmer	0
CLR/12/Sleep/Ent	Fav / Marker / PC
Disc/Album	CH+ / Page+
Disc/Album CH-	CH- / Page-
Vol+	Vol+
Vol-	Vol-

Original	Sustituto
Pause/<	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
<<	<< / Preset-
>>	>>  / Preset+
Stereo	Audio / Lang I/II
Surround	Eject / Surround
< Listening Mode	Left
Listening Mode >	Right
Level-/Random	Blue / Prime Video / Random
Level+/Repeat	Green / APP / Repeat
Display	Display / Media





Original	Sustituto	Original	Sustituto
Standby	Power	<<	<< / Tune-
1/VCR/DVR	1	Stereo	Audio / Lang I/II
2/CBL/SAT	2	Surround	Eject / Surround
3/Game/TV	3	< Listening Mode	Left
4/AUX	4	Listening Mode >	Right
5/Multi CH	5	Play Mode/VCR	OK
6/DVD	6	L.Night/DVD	Sleep / Timer
7/Tape	7		
8/Tuner	8		
9/CD	9		
+10/10/-/-/D.Tun	Guide / EPG / -/--		
0/11/Dimmer	0		
Disc/Album	CH+ / Page+		
Disc/Album CH-	CH- / Page-		
Pause/<	Pause / Step / Freeze		
Play	Play / Slow		
Stop	Stop / Hold		

