



Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok

Original	Sustituto
 OK	 Shift + Ok
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Page-	 Shift + Ch -
 Page+	 Shift + Ch +
 FAV	 Pre Ch
 Guide	 Guide
 i	 Info
 NTSC / PAL	 Smart
 Pause	 Pause
 Audio	 Dual
 Radio	 TV/R
 Audio LR	 Options





Original	Sustituto	Original	Sustituto
 Red / F1	 Red		
 Green / F2	 Green		
 Yellow / F3	 Yellow		
 Blue / F4	 Blue		
 Last	 Back		
 Text	 Text		

