



Original	Sustituto
	Power
	Source
	1
	2
	3
	4
	5
	6
	7
	8
	9
	TV/Radio /
	0
	Recall
	V+
	Mute
	P+

Original	Sustituto
	World/Internet
	P-
	Menu
	Q.Menu
	Up
	Left
	OK
	Right
	Down
	Back
	Exit
	i
	Music/Camera
	TV Guide
	* / O
	* / Q





Original	Sustituto	Original	Sustituto
 [=]/Text	 GOTO TEXT Text / Goto		
 Red	 NETFLIX SEARCH Red / Netflix / Search		
 Green	 APP REPEAT Green / APP / Repeat		
 Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat		
 Blue	 Prime Video RANDOM Blue / Prime Video / Random		
 LANG. Lang	 LANG I/II AUDIO Audio / Lang I/II		
 [=]..	 TITLE SOUND Sound / Title		
 [-O-]	 OPT-TOOLS SETUP Setup / OPT /		
 <<	 TUNE- << / Tune-		
 Pause	 STEP-FREEZE Pause / Step / Freeze		
 >>	 TUNE+ >> / Tune+		
 Rec	 REC MODE Rec / Rec Mode		
 Play	 SLOW Play / Slow		
 Stop	 HOLD Stop / Hold		

