

 

 

 

 

 

 



 



 

 

 

 

 









Original	Sustituto
 Power	 Power
 Red/Demo	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Option	 Setup / OPT /
 [I]	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu/Browse	 Menu / Home
 [=]	 Text / Goto
 Vol+	 Vol+
 P+	 CH+ / Page+
 Vol-	 Vol-

Original	Sustituto
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0	 0
 P<P	 Back / Return
 Ambilight	 Smart / List
 Mode	 D.Menu / Top
 <<	 << / Tune-





Original	Sustituto	Original	Sustituto
 Stop/Cancel	 Stop / Hold		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 [i+]	 Display / Media		
 [1 2]	 Picture / Format		
 FAV	 Fav / Marker / PC		

Original	Sustituto

