



Original	Sustituto
	Power
	Guide
	Tv Input
	AV Input
	Menu
	Text
	[≡♦]/STTL
	[+]/Aspect
	i
	Exit
	Netflix
	APPS
	Left
	Up
	Right
	Home
	OK

Original	Sustituto
	Option
	Down
	Back/Return
	Red
	Green
	Yellow
	Blue
	Vol+
	Mute
	PR+
	Vol-
	PR-
	1
	2
	3
	4
	5





Original		Sustituto		Original	Sustituto
	6		6		
	7		7		
	8		8		
	9		9		
	?/Help		D.Menu / Top		
	0		0		
	Last View		Fav / Marker / PC		
	<<		<< / Tune-		
	Play		Play / Slow		
	>>		>> / Tune+		
	I<<		I<< / Preset-		
	Pause		Pause / Step / Freeze		
	>>I		>>I / Preset+		
	Stop		Stop / Hold		
	Rec		Rec / Rec Mode		

