





 





Original	Sustituto
	 Power
	 Mute / Dimmer
	 Sleep / Timer
	 Guide / EPG / -/--
	 Up
	 AV / Input / RDS
	 Left
	 OK
	 Right
	 Menu / Home
	 Down
	 Exit / Cancel / Clear
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Text / Goto

Original	Sustituto
	 Smart / List
	 Display / Media
	 Shift + Stop /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Back / Return
	 0
	 Shift + 4
	 Info / Angle
	 CH+ / Page+





Original	Sustituto
	Vol+
	CH- / Page-
	Vol-
	Picture / Format
	D.Menu / Top
	Shift + Power
	Rec / Rec Mode
	Shift + CH- /
	Shift + CH+ /
	<< / Tune-
	>> / Tune+
	Stop / Hold
	Pause / Step / Freeze
	Play / Slow

Original	Sustituto





Original	Sustituto
Power DVD	Power
Rec DVD	Rec / Rec Mode
Programme Down	CH- / Page-
Programme Up	CH+ / Page+
I<< DVD	I<< / Preset-
>>I DVD	>>I / Preset+
Stop DVD	Stop / Hold
Pause/Step DVD	Pause / Step / Freeze
Play DVD	Play / Slow

Original	Sustituto

