







 




| Original |                   | Sustituto |                       | Original |                    | Sustituto |                           |
|----------|-------------------|-----------|-----------------------|----------|--------------------|-----------|---------------------------|
|          | Power             |           | Power                 |          | Volume+            |           | Vol+                      |
|          | Muting            |           | Mute / Dimmer         |          | Volume-            |           | Vol-                      |
|          | Pause/Enter/Shift |           | Pause / Step / Freeze |          | Surr.Parra./Displa |           | Display / Media           |
|          | 6.1/7.1 Surround  |           | Sound / Title         |          | 1/Tuner            |           | 1                         |
|          | Stereo            |           | Audio / Lang I/II     |          | 2/Phono            |           | 2                         |
|          | Output            |           | Eject / Surround      |          | 3/CD               |           | 3                         |
|          | DSP Simu.         |           | Zoom / Size           |          | 4/CDR/Tape         |           | 4                         |
|          | Tv/VCR            |           | TV/Radio /            |          | 5/VDP              |           | 5                         |
|          | Direct            |           | D.Menu / Top          |          | 6/DVD              |           | 6                         |
|          | Setup             |           | Setup / OPT /         |          | 7/VCR-1            |           | 7                         |
|          | Test Tone         |           | Text / Goto           |          | 8/VCR-2/V-AUX      |           | 8                         |
|          | Input Mode        |           | AV / Input / RDS      |          | 9/Tv/DBS           |           | 9                         |
|          | OSD/Menu          |           | Menu / Home           |          | +10                |           | Guide / EPG / -/-         |
|          | Up                |           | Up                    |          | 0                  |           | 0                         |
|          | Left              |           | Left                  |          | Off                |           | Shift + Power             |
|          | Right             |           | Right                 |          | Speaker            |           | Shift + Sound / Title     |
|          | Down              |           | Down                  |          | Dolby/DTS          |           | Shift + Audio / Lang I/II |



Surround



| Original   | Sustituto  |
|--|--|
|  Input Ext. In  |  +  Shift + TV/Radio / Program |
|  Input Analog   |  +  Shift + AV / Input / RDS   |
|  5CH/7CH Stereo |  +  Shift + 5                  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

| Original | Sustituto |
|----------|-----------|
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |
|          |           |

