 

 
 

 
 
 


 
 


 

 

 

 



 
 



 

 




 


 



 



Original	Sustituto		
	Power		Power
	Source		AV
	Top Menu		Menu
	Disc Menu		D. Menu
	Smart TV		TV/R
	Bluetooth		Guide
	Home		Smart
	[≡]		Text
	OK		Ok
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Original	Sustituto		
	Open/Close		Eject
	Return		Back
	III		Options
	Play		Play
	Stop		Stop
	Pause		Pause
	<<		<<
	>>		>>
	I<		I<<
	>I		>>I
	Vol+		Vol +
	Vol		Vol -
	Mute		Mute
	1		1
	2		2
	3		3
	4		4





	Original	Sustituto	Original	Sustituto
	 5	 5		
	 6	 6		
	 7	 7		
	 8	 8		
	 9	 9		
	 0	 0		
	 Subtitle	 Subt		
	 Audio	 Dual		

