
 
 
 
 
 

 

 
 
 
 
 

 
 
 

 
 


 

 
 






 



 

 
 
 
 
 
 
 

 



 
 


 
 
 
 
 
 




| Original | Sustituto |
|---|---|
|  Power |  Power |
|  HDMI1 |  1 |
|  HDMI2 |  2 |
|  HDMI ARC |  3 |
|  Coax |  Red |
|  Optical |  Green |
|  Audio In |  Yellow |
|  AUX |  Blue |
|  Bluetooth |  Smart |
|  I< |  I<< |
|  Play |  Play |
|  Pause |  Pause |
|  >I |  >>I |
|  Bass+ |  Up |
|  Bass- |  Down |
|  Treble+ |  Ch + |
|  Treble- |  Ch - |

| Original | Sustituto |
|---|--|
|  Vol+ |  Vol + |
|  Vol- |  Vol - |
|  Mute |  Mute |
|  Voice |  Media |
|  Music |  Menu |
|  Movie |  Info |
|  Rear Vol- |  4 |
|  Rear Vol+ |  5 |
|  Audio Sync- |  7 |
|  Audio Sync+ |  8 |
|  Night |  Options |
|  Auto Vol |  Dual |
|  DIM |  Subt |
|  Calibration |  TV/R |

