
 


 
 



 
 
 
 





 








 









 



 





Original	Sustituto
	Power
	Ambilight
	Sources
	Settings
	Top Picks
	Search
	Exit/TV
	Tv Guide
	Windows
	List
	Up
	Left
	OK
	Right
	Down
	Back / Return
	Info / Angle

Original	Sustituto
	Home
	Red
	Green
	Yellow
	Blue
	Vol+
	Netflix
	CH+ / Page+
	Vol-
	Mute
	CH- / Page-
	1
	2
	3
	4
	5
	6





Original	Sustituto	Original	Sustituto
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ
	0		0
	Text		Text / Goto
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+

Original	Sustituto

