


 




 








 









 





 



 

 




 







 

 




 

 










Original	Sustituto	Original	Sustituto
 Power	 Power	 Up	 Up
 [i+]	 Info	 Left	 Left
 Text ↑ / Stop	 Stop	 OK	 Ok
 Text ↑ / Stop	 Shift + Ch +	 Right	 Right
 Text ↑ / Stop	 Text	 Down	 Down
 Red / <<<	 <<<	 Exit	 Exit
 Red / <<<	 Red	 Back	 Back
 Green / Pause	 Pause	 Vol+	 Vol +
 Green / Pause	 Green	 Vol-	 Vol -
 Yellow / Opt / Play	 Options	 Mute	 Mute
 Yellow / Opt / Play	 Yellow	 P+	 Ch +
 Yellow / Opt / Play	 Play	 P-	 Ch -
 Blue ↓ / >>>	 Blue	 1	 1
 Blue ↓ / >>>	 >>>	 2	 2
 Blue ↓ / >>>	 Shift + Ch -	 3	 3
 EPG	 Guide	 4	 4
 List	 List	 5	 5





 
 




 








 



 









 

 










 

 
 




 


 



 










Original	Sustituto
6	6
7	7
8	8
9	9
0	0
I-II	SOUND DUAL Dual
TV RADIO	SEARCH TV/R TV/R
[_]	AD SUBT Subt
V-Format	PICTURE FORMAT Format
V-Output	TIMER AV AV
[< >]	SHIFT + PICTURE FORMAT Shift + Format
MENU	TOP MENU MENU Menu
TIMER	SHIFT + TIMER AV Shift + AV

Original	Sustituto





Original	Sustituto	Original	Sustituto
 Power	 Power	 OK	 Ok
 [i+]	 Info	 Right	 Right
 Text ↑ / Stop	 Stop	 Down	 Down
 Text ↑ / Stop	 Shift + Ch +	 Exit	 Exit
 Text ↑ / Stop	 Text	 Back	 Back
 Red / <<<	 Red	 Vol+	 Vol +
 Red / <<<	 <<<	 Vol-	 Vol -
 Green / Pause	 Pause	 Mute	 Mute
 Green / Pause	 Green	 P+	 Ch +
 Yellow / Opt / Play	 Yellow	 P-	 Ch -
 Yellow / Opt / Play	 Options	 1	 1
 Yellow / Opt / Play	 Play	 2	 2
 Blue ↓ / >>>	 Blue	 3	 3
 Blue ↓ / >>>	 >>>	 4	 4
 Blue ↓ / >>>	 Shift + Ch -	 5	 5
 Up	 Up	 6	 6
 Left	 Left	 7	 7








 





















 







 







 












 

 








Original		Sustituto		Original		Sustituto	
	8		8				
	9		9				
	0		0				
	V-Output		AV				
	[< >]		Format				
	Menu		Menu				
	I-II		Dual				





Original	Sustituto	Original	Sustituto
 DVD Power	 Power	 DVD Down	 Down
 VCR Power	 Shift + Power	 DVD Exit	 Exit
 DVD [i+]	 Info	 DVD Vol+	 Vol +
 VCR Stop	 Shift + Stop	 DVD Vol-	 Vol -
 DVD Stop	 Stop	 VCR Mute	 Shift + Mute
 VCR <<	 Shift + <<	 DVD Mute	 Mute
 DVD <<	 <<	 DVD P+	 Ch +
 VCR Pause	 Shift + Pause	 VCR P+	 Shift + Ch +
 DVD Pause	 Pause	 DVD P-	 Ch -
 VCR Play	 Shift + Play	 VCR P-	 Shift + Ch -
 DVD Play	 Play	 DVD 1	 1
 DVD >>	 >>	 VCR 1	 Shift + 1
 VCR >>	 Shift + >>	 DVD 2	 2
 DVD Up	 Up	 VCR 2	 Shift + 2
 DVD Left	 Left	 VCR 3	 Shift + 3
 DVD OK	 Ok	 DVD 3	 3
 DVD Right	 Right	 DVD 4	 4

















 






 





 







 





 

 




 

 
 
 
 
 
 


Original	Sustituto
4 VCR 4	SHIFT + 4 Shift + 4
5 DVD 5	5 5
5 VCR 5	SHIFT + 5 Shift + 5
6 DVD 6	6 6
6 VCR 6	SHIFT + 6 Shift + 6
7 VCR 7	SHIFT + 7 Shift + 7
7 DVD 7	7 7
8 DVD 8	8 8
8 VCR 8	SHIFT + 8 Shift + 8
9 DVD 9	9 9
9 VCR 9	SHIFT + 9 Shift + 9
0 VCR 0	SHIFT + 0 Shift + 0
0 DVD 0	0 0
I-II VCR I-II	SOUND DUAL Dual
DVD [_]	AD SUBT Subt
V-Output VCR V-Output	SHIFT + TIMER AV Shift + AV
V-Output DVD V-Output	TIMER AV AV

Original	Sustituto
DVD [◀ ▶]	PICTURE FORMAT Format
VCR [◀ ▶]	SHIFT + PICTURE FORMAT Shift + Format
DVD Menu	TOP MENU MENU Menu





Original	Sustituto	Original	Sustituto
	Power		Power
	<<		<<
	Pause		Pause
	Play		Play
	>>		>>
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	V-Output		AV
	[< >]		Format
	Menu		Menu

