



 
 
 

 



 

 

 
 

 




Original	Sustituto		
	Power		Power
	Ambilight		3D
	Windows		Shift + Media
	Smart/Colors		Smart
	Sources/Pair		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	←		Back
	Home		Shift + Smart
	Tv Guide/List		Guide
	<<		<<
	Play		Play
	>>		>>
	Stop		Stop

Original	Sustituto		
	Pause		Pause
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Netflix		Media
	FPlay		Pre Ch
	Rakuten Tv		TV/R
	CH+		Ch +
	CH-		Ch -
	TV/Exit		Exit
	1		1
	2		2





	Original	Sustituto		Sustituto
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0		0	
	Menu		Menu	
	+/Options		Options	

	Original	Sustituto

