 
 
 
 

 
 
 
 



 
 

 
 
 
 

 
 

 
 
 

 
 
 
 
 






| Original | Sustituto | Original | Sustituto |
|---|-----------------------|---|-----------------------|
|  | Setup / OPT / |  | Pause / Step / Freeze |
|  | Power |  | Play / Slow |
|  | D.Menu / Top |  | OK |
|  | AV / Input / RDS |  | TV/Radio / |
|  | Shift + Power |  | Smart / List |
|  | Exit / Cancel / Clear |  | Fav / Marker / PC |
|  | Stop / Hold |  | Info / Angle |
|  | I<< / Preset- |  | Guide / EPG / -/- |
|  | >>I / Preset+ |  | Subtitle / EQ |
|  | CH+ / Page+ |  | Audio / Lang I/II |
|  | Up |  | Text / Goto |
|  | CH- / Page- |  | Mute / Dimmer |
|  | Down |  | Vol- |
|  | Left |  | Vol+ |
|  | << / Tune- |  | 1 |
|  | >> / Tune+ |  | 2 |
|  | Right |  | 3 |



