



Original	Sustituto
	Zoom / Size
	Power
	AV / Input / RDS
	>> / Tune+
	Red / Netflix / Search
	Green / APP / Repeat
	<< / Tune-
	Yellow / YouTube / Repeat
	Stop / Hold
	Blue / Prime Video / Random
	Play / Slow
	TV/Radio /
	Text / Goto
	D.Menu / Top
	Menu / Home
	Up
	Down

Original	Sustituto
	Left
	Right
	Vol+
	Vol-
	Mute / Dimmer
	CH+ / Page+
	CH- / Page-
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0





Original		Sustituto	
	[i+]		Info / Angle
	I-II		Audio / Lang I/II
	[I 2]		Subtitle / EQ
[:≡] button"/>	[:≡]		Guide / EPG / -/--
[<>] button"/>	[<>]		Picture / Format
P<P button"/>	P<P		Fav / Marker / PC
SMART button with music note"/>	♪/Smart		Smart / List
SMART button with TV icon"/>	[ ]/Smart		Display / Media

Original	Sustituto








Original	Sustituto
Power SAT	+  Shift + Power
Power	Power
Source/[?]	AV / Input / RDS
Source SAT	+  Shift + AV / Input / RDS
>>	>> / Tune+
Red SAT	Red / Netflix / Search
<<	<< / Tune-
Green SAT	Green / APP / Repeat
Yellow SAT	Yellow / YouTube / Repeat
Stop	Stop / Hold
Play	Play / Slow
Blue SAT	Blue / Prime Video / Random
Radio	TV/Radio /
[=]	Text / Goto
Up	Up
Up SAT	+  Shift + Up
Down	Down

Original	Sustituto
Down SAT	+  Shift + Down
Left SAT	+  Shift + Left
Left	Left
Right SAT	+  Shift + Right
Right	Right
OK SAT	+  Shift + OK
OK	OK
[ ] SAT	+  Shift + Back / Return
[ ]	Back / Return
Menu SAT	D.Menu / Top
Menu	Menu / Home
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
P+ SAT	+  Shift + CH+ /
P+	CH+ / Page+
P- SAT	+  Shift + CH- /

Page-













 















Original	Sustituto
	CH PAGE / Page-
	SHIFT +  1 Shift + 1
	 1
	SHIFT +  2 Shift + 2
	 2
	SHIFT +  3 Shift + 3
	 3
	SHIFT +  4 Shift + 4
	 4
	SHIFT +  5 Shift + 5
	 5
	SHIFT +  6 Shift + 6
	 6
	SHIFT +  7 Shift + 7
	 7
	SHIFT +  8 Shift + 8
	 8

Original	Sustituto
	SHIFT +  9 Shift + 9
	 9
	SHIFT +  0 Shift + 0
	 0
	 INFO Info / Angle
	 AUDIO Audio / Lang I/II
	 PICTURE Picture / Format
	 PC FAV MARKER Fav / Marker / PC





Original	Sustituto
 Power	 Power
 >>	 >> / Tune+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 Radio	 TV/Radio /
 [ ]	 Back / Return
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 P+	 CH+ / Page+
 P-	 CH- / Page-
 1	 1

Original	Sustituto
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [i+]	 Info / Angle
 I-II	 Audio / Lang I/II





Original	Sustituto
Power AMP	Shift + Power
Power	Power
Source/[?]	AV / Input / RDS
>>	>> / Tune+
>> AMP	>>I / Preset+
Red	Red / Netflix / Search
Rec	Rec / Rec Mode
<< AMP	I<< / Preset-
Green	Green / APP / Repeat
<<	<< / Tune-
Yellow	Yellow / YouTube / Repeat
Stop	Stop / Hold
Blue	Blue / Prime Video / Random
Play	Play / Slow
Radio AMP	TV/Radio /
[≡] AMP	Text / Goto
[ ]	Back / Return

Original	Sustituto
Menu	Menu / Home
Menu AMP	D.Menu / Top
Up AMP	Shift + Up
Up	Up
Down	Down
Down AMP	Shift + Down
Left	Left
Left AMP	Shift + Left
Right	Right
Right AMP	Shift + Right
OK	OK
OK AMP	Shift + OK
Vol+ AMP	Shift + Smart / List
Vol+	Vol+
Vol-	Vol-
Mute AMP	Shift + Mute / Dimmer
Mute	Mute / Dimmer





Original	Sustituto
P+	CH+ / Page+
P+ AMP	SHIFT +  CH+ /
P- AMP	SHIFT +  CH- /
P-	CH- / Page-
1 AMP	SHIFT +  Shift + 1
1	TV 1
2 AMP	SHIFT +  Shift + 2
2	DVD 2
3 AMP	SHIFT +  Shift + 3
3	CD-STB 3
4 AMP	SHIFT +  Shift + 4
4	VIDEO 4
5 AMP	SHIFT +  Shift + 5
5	TAPE 5
6 AMP	SHIFT +  Shift + 6
6	TUNER 6
7 AMP	SHIFT +  Shift + 7

Original	Sustituto
7	AUX-HDD 7
8 AMP	SHIFT +  Shift + 8
8	USB 8
9 AMP	SHIFT +  Shift + 9
9	BLUETOOTH 9
0 AMP	SHIFT +  Shift + 0
0	HDMI-BAT 0
[i+]	ANGLE INFO Info / Angle
I-II	LANG I/II AUDIO Audio / Lang I/II
[1 2] AMP	EQ SUBTITLE Subtitle / EQ
[+]	SIZE ZOOM Zoom / Size
[<>]	FORMAT PICTURE Picture / Format
P<P	PC FAV MARKER Fav / Marker / PC
Smart	LIST SMART Smart / List
[ ]/Smart	MEDIA DISPLAY Display / Media

