





 



 



 


 
Original	Sustituto
Standby / On	Power
BD	Shift + 5
DVD	Shift + 2
DVR / BDR	Shift + 7
HDMI	Shift + 0
TV	Shift + 1
CD	Shift + 3
NET	Shift + 9
ADPT	Shift + Guide / EPG / -/-
iPod / USB	Shift + 8
SAT / CBL	Shift + Fav / Marker / PC
MHL	Shift + 4
TUNER	Shift + 6
Input Select ↶	CH- / Page-
Input Select ↷	CH+ / Page+
i / Status	Info / Angle
Volume+	Vol+

Original	Sustituto
Volume-	Vol-
Mute	Mute / Dimmer
Audio	Audio / Lang I/II
Up	Up
Video	Picture / Format
Tools Menu	Setup / OPT /
Left	Left
Enter	OK
Right	Right
Home Menu	Menu / Home
iPod Ctrl.	D.Menu / Top
Down	Down
Return	Back / Return
Features PHASE	Red / Netflix / Search
Features ECO	Yellow / YouTube / Repeat
MPX	Shift + Pause / Step / Freeze
Pause	Pause / Step / Freeze





Original	Sustituto
 BAND	 Shift + Play /
 Play	 Play / Slow
 PTY	 Shift + Stop /
 Stop	 Stop / Hold
 Preset -	 Shift + I<< / Preset-
 I<<	 I<< / Preset-
 Preset+	 Shift + >>I / Preset+
 >>I	 >>I / Preset+
 Tune-	 Shift + << /
 <<	 << / Tune-
 Tune+	 Shift + >> /
 >>	 >> / Tune+
 Auto / ALC /	 Subtitle / EQ
 1	 1
 Standard	 Smart / List
 2	 2
 Adv. Surr.	 Eject / Surround

Original	Sustituto
 3	 3
 + Favorite	 Fav / Marker / PC
 Audio / THX	 Sound / Title
 4	 4
 Signal Sel.	 TV/Radio /
 MCACC	 Zoom / Size
 5	 5
 6	 6
 CH. Level	 Text / Goto
 Disp / Auto	 Display / Media
 7	 7
 Speakers	 Shift + Audio / Lang I/II
 Dimmer	 Shift + Mute / Dimmer
 8	 8
 9	 9
 Sleep	 Sleep / Timer
 Repeat	 Green / APP / Repeat














Original	Sustituto
HDMI OUT	RDS AV INPUT
HDMI OUT	HDMI - SAT
CLASS	CLEAR EXIT
SHUFFLE	Prime Video RANDOM

Original	Sustituto





Original	Sustituto
 Standby / On	 Power
 BD	 Shift + 5
 DVD	 Shift + 2
 DVR / BDR	 Shift + 7
 HDMI	 Shift + 0
 TV	 Shift + 1
 CD	 Shift + 3
 NET	 Shift + 9
 ADPT	 Shift + Guide / EPG / -/-
 iPod / USB	 Shift + 8
 SAT / CBL	 Shift + Fav / Marker / PC
 MHL	 Shift + 4
 TUNER	 Shift + 6
 Input Select ↻	 CH- / Page-
 Input Select ↻	 CH+ / Page+
 i / Status	 Info / Angle
 Volume+	 Vol+

Original	Sustituto
 Volume-	 Vol-
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 Up	 Up
 Video	 Picture / Format
 Tools Menu	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Home Menu	 Menu / Home
 iPod Ctrl.	 D.Menu / Top
 Down	 Down
 Return	 Back / Return
 Features PHASE	 Red / Netflix / Search
 Features ECO	 Yellow / YouTube / Repeat
 MPX	 Shift + Pause / Step / Freeze
 Pause	 Pause / Step / Freeze





Original	Sustituto
BAND	+ Shift + Play /
Play	Play / Slow
PTY	+ Shift + Stop /
Stop	Stop / Hold
Preset -	+ Shift + I<< / Preset-
I<<	I<< / Preset-
Preset+	+ Shift + >>I / Preset+
>>I	>>I / Preset+
Tune-	+ Shift + << /
<<	<< / Tune-
Tune+	+ Shift + >> /
>>	>> / Tune+
Auto / ALC /	Subtitle / EQ
1	1
Standard	Smart / List
2	2
Adv. Surr.	Eject / Surround

 

 





Original	Sustituto
3	3
+ Favorite	Fav / Marker / PC
Audio / THX	Sound / Title
4	4
4	TV/Radio /
MCACC	Zoom / Size
5	5
6	6
CH. Level	Text / Goto
Disp / Auto	Display / Media
7	7
Speakers	+ Shift + Audio / Lang I/II
8	+ Shift + Mute / Dimmer
8	8
9	9
Sleep	Sleep / Timer
Repeat	Green / APP / Repeat





Original

Sustituto

	HDMI Out		AV / Input / RDS
	0		0
	Class		Exit / Cancel / Clear
	Shuffle		Blue / Prime Video / Random

Original

Sustituto

