

 
 
 
 
 

 
 
 
 
 
 
 

 


 

 
 



 
 


 

 

 
 
 


 
 
 

 

 

 
 


 
 

 

 

 



 

 







Original	Sustituto	Original	Sustituto
 Standby / On	 Power	 9	 9
 Sleep	 Sleep	 10/0	 0
 Mono	 Shift + Dual	 >10	 Guide
 Disp	 Info	 CLR	 Exit
 CD	 Yellow	 ST.Wide	 3D
 Eject CD	 Eject	 Program	 Shift + Sleep
 Tape	 Red	 Random	 TV/R
 Tuner	 Green	 Repeat	 Text
 Line 1.2	 Blue	 Sound Mode	 Dual
 1	 1	 Play / Pause / Play Rev.	 Play
 2	 2	 Play / Pause / Play Rev.	 Pause
 3	 3	 Stop	 Stop
 4	 4	 <<	 <<
 5	 5	 >>	 >>
 6	 6	 I<< / -	 I<<
 7	 7	 >>I / +	 >>I
 8	 8	 Vol+	 Vol +



