

 

 



 

 

 

 

 

 

 

 

 



 

 
 


























 

 

 





 







 
 









Original	Sustituto	Original	Sustituto
	Power		Power
	DTV		Shift + TV/Radio / Program
	TV		TV/Radio /
	AV		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	PRE-CH		Back / Return
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Vol+		Vol+
	i		Info / Angle
	CH+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer
	CH-		CH- / Page-
	EPG		Guide / EPG / -/-
	Option		Setup / OPT /
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home





Original	Sustituto
 Exit	 Exit / Cancel / Clear
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 File List/[≡i]	 Smart / List
 Bookmark/[.,≡]	 Display / Media
 Repeat/[≡O]	 Shift + Green / APP / REPEAT
 A<>B/[≡?]	 Shift + Yellow / YouTube / REPEAT A-B
 PIC Size	 Zoom / Size
 PIC Mode	 Picture / Format
 SND Mode	 Sleep / Timer
 M/S	 D.Menu / Top

Original	Sustituto

