





 



 





 

 



 



 

 

 

 



 





 











 



 




















 



| Original | Sustituto |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Play |  Play / Slow |
|  Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  <<< |  <<< / Tune- |
|  >>> |  >>> / Tune+ |
|  I<<< |  I<<< / Preset- |
|  >>I |  >>I / Preset+ |
|  S.Mode |  Sound / Title |
|  Audio/Reveal |  Audio / Lang I/II |
|  Zoom/Subpage |  Subtitle / EQ |
|  P.Mode |  Picture / Format |
|  Size |  Zoom / Size |
|  Sleep |  Sleep / Timer |
|  D.Menu |  D.Menu / Top |
|  Text |  Text / Goto |

| Original | Sustituto |
|--|---|
|  Input |  AV / Input / RDS |
|  LCD Menu |  Menu / Home |
|  Up |  Up |
|  Index |  Info / Angle |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Recall |  Back / Return |
|  Vol+ |  Vol+ |
|  DVD Setup |  Smart / List |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  Display |  Display / Media |
|  CH- |  CH- / Page- |
|  1 |  1 |
|  2 |  2 |





| Original | Sustituto |
|---|---|
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  -/-- |  Guide / EPG / -/-- |
|  0 |  0 |
|  Auto |  Fav / Marker / PC |
|  Red/Program |  Red / Netflix / Search |
|  Green/Intro |  Green / APP / Repeat |
|  Yellow/Repeat |  Yellow / YouTube / Repeat |
|  Blue/A-B |  Blue / Prime Video / Random |
|  Hold |  Shift + Stop / |
|  Title |  Shift + Sound / Title |
|  Nicam |  Shift + Audio / Lang I/II |

| Original | Sustituto |
|---|--|
|  Aspect |  Shift + Picture / Format |
|  D.Subt. |  Shift + Zoom / |
|  Goto |  Shift + Text / |
|  Angle |  Shift + Info / Angle |
|  Slow/PgUp |  Shift + CH+ / |
|  D.Disp |  Shift + Display / Media |
|  Step/PgDn |  Shift + CH- / |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

