

 



















 















 









 




















Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Recall	 Back / Return
 V +	 Vol+
 Aspect	 Shift + Picture / Format
 CH +	 CH+ / Page+

Original	Sustituto
 V -	 Vol-
 Home	 Shift + Menu /
 CH -	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Display	 Display / Media
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 MTS	 Shift + Smart / List
 Rec	 Rec / Rec Mode





Original	Sustituto	Original	Sustituto
 Guide	 Guide / EPG / -/--	 CAP	 Shift + Display / Media
 Red	 Red / Netflix / Search	 Subtitle	 Subtitle / EQ
 Green	 Green / APP / Repeat	 TV / Radio	 TV/Radio /
 Yellow	 Yellow / YouTube / Repeat	 FAV	 Fav / Marker / PC
 Blue	 Blue / Prime Video / Random	 Size / Mouse	 Zoom / Size
 << / Index	 << / Tune-	 Hold / Refresh	 Stop / Hold
 << / Index	 Shift + << /		
 Play/Pause /	 Shift + Play /		
 Play/Pause /	 Pause / Step / Freeze		
 Play/Pause /	 Play / Slow		
 >> / TTX	 >> / Tune+		
 >> / TTX	 Shift + >> /		
 I<< / Sub.Pg	 Shift + I<< / Preset-		
 I<< / Sub.Pg	 I<< / Preset-		
 >>I / Reveal	 >>I / Preset+		
 Stop / Mix	 Shift + Rec / Rec Mode		
 Stop / Mix	 Shift + Stop /		

Hold

