





















Original	Sustituto
PP	Back / Return
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
P<P	Fav / Marker / PC
0	0
--	Guide / EPG / -/--
M	Menu / Home
i	Info / Angle
I-II	Audio / Lang I/II

Original	Sustituto
Mute	Mute / Dimmer
Left	Left
Up	Up
Right	Right
OK	OK
Down	Down
V -	Vol-
V +	Vol+
P -	CH- / Page-
P +	CH+ / Page+
Red / Sound	Red / Netflix / Search
Red / Sound	Sound / Title
Green / Picture	Green / APP / Repeat
Green / Picture	Picture / Format
Yellow / Feature	Yellow / YouTube / Repeat
Blue / Install	Blue / Prime Video / Random
Text	Text / Goto





Original	Sustituto
 [≡o]	 Sleep / Timer
 Hold	 Stop / Hold
 [≡X]	 Exit / Cancel / Clear
 Mix / PIP Swap	 Smart / List
 PIP / Size	 Zoom / Size
 PIP Down / [≡?]	 I<< / Preset-
 PIP Up / Index	 >>I / Preset+
 [TV]	 TV/Radio /
 [AV]	 AV / Input / RDS

Original	Sustituto

