







 
 
 
 
 
 
 

 

 



 

 

 
 
 

 

 



 
 

 
 
 


 



 



 
 
 

 



 











Original	Sustituto	Original	Sustituto
 Power	 Power	 Blue / Title	 Blue
 HDMI Control	 Smart	 1	 1
 Rec	 Rec	 2	 2
 Play	 Play	 3	 3
 Pause	 Pause	 4	 4
 Stop	 Stop	 5	 5
 I<<	 I<<	 6	 6
 <<	 <<	 7	 7
 >>	 >>	 8	 8
 >>I	 >>I	 9	 9
 Screen	 Format	 0	 0
 Lang	 Dual	 Text	 Text
 Subtitle	 Subt	 Swap	 Pre Ch
 PIP / World	 3D	 Up	 Up
 Red / Zoom	 Red	 Right	 Right
 Green / Repeat	 Green	 Down	 Down
 Yellow / Root	 Yellow	 Left	 Left





Original	Sustituto
OK	OK
P/CH +	CH +
P/CH -	CH -
Mute	MUTE
Vol +	VOL +
Vol -	VOL -
Menu	TOP MENU
Source	TIMER
Return	RETURN
EPG	GUIDE
Info	DISPLAY
Sleep	PROG SLEEP
FAV	SHIFT + FAV PRE-CH
Angle / Media	APP MEDIA
Search Mode	SEARCH TV/R
Display	SHIFT + DISPLAY INFO
Presets	DISC NAV LIST

Original	Sustituto

