

 



 

 

 
 
 
 
 







 



 

 

 

 





 
 
Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 List	 Shift + Smart / List
 Vol+	 Vol+
 TV	 TV/Radio /
 P+	 CH+ / Page+

Original	Sustituto
 Vol-	 Vol-
 Smart	 Smart / List
 P-	 CH- / Page-
 Home	 Shift + Menu /
 Up	 Up
 =	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 ←	 Back / Return
 Down	 Down
 Source	 AV / Input / RDS
 Exit	 Exit / Cancel / Clear
 Zoom	 Zoom / Size
 *	 D.Menu / Top
 Info	 Info / Angle
 EPG	 Guide / EPG / -/-





Original	Sustituto
 Lang/AD	 Audio / Lang I/II
 USB	 Shift + 8
 Subt.	 Subtitle / EQ
 Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 I<	 I<< / Preset-
 Stop	 Stop / Hold
 >I	 >>I / Preset+
 Rec	 Rec / Rec Mode
 Netflix	 Shift + Red / Netflix / Search

Original	Sustituto
 YouTube	 Shift + Yellow / YouTube /

