



Original	Sustituto
	Sleep / Timer
	Smart / List
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Sound / Title
	0
	Shift + 0
	Display / Media
	Up

Original	Sustituto
	CH+ / Page+
	Menu / Home
	Left
	Vol-
	Right
	Vol+
	Red / Netflix / Search
	Down
	CH- / Page-
	Green / APP / Repeat
	Blue / Prime Video / Random
	Yellow / YouTube / Repeat
	Mute / Dimmer
	Audio / Lang I/II
	Back / Return
	AV / Input / RDS
	Picture / Format














 



Original	Sustituto
	Info / Angle
	TV/Radio /
	Text / Goto
	Guide / EPG / -/--
	D.Menu / Top
	Subtitle / EQ
	Shift + Text /
	Exit / Cancel / Clear
	Eject / Surround
	Zoom / Size
	Setup / OPT /

Original	Sustituto





Original	Sustituto	Original	Sustituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Display		Display / Media
	*		Sound / Title
	<<		<< / Tune-
	Up / PR+		CH+ / Page+
	Up / PR+		Up
	Down / PR-		CH- / Page-
	Down / PR-		Down
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Eject		Eject / Surround

