




















 












Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Mute	 Mute / Dimmer
 0	 0
 16:9	 Picture / Format
 S/M/D	 Display / Media
 PP	 Back / Return
 →←	 Smart / List
 P+	 CH+ / Page+

Original	Sustituto
 P+	 Up
 V-	 Vol-
 V-	 Left
 Menu	 Menu / Home
 Menu	 OK
 V+	 Vol+
 V+	 Right
 P-	 CH- / Page-
 P-	 Down
 Tv	 TV/Radio /
 Exit	 Exit / Cancel / Clear
 Av	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 ≡Text	 Text / Goto





Original	Sustituto	Original	Sustituto
	/≡ Mix		Audio / Lang I/II
	≡☺ Time Page		Subtitle / EQ
	Info		Info / Angle
	≡i		Guide / EPG / -/-
	≡+ PC FAV MARKER		Fav / Marker / PC Setup / OPT /
	≡◆		Zoom / Size
	≡x Cancel		D.Menu / Top
	≡? Reveal		

Original	Sustituto

