





 













Original	Sustituto
	Power
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	AV / Input / RDS
	TV/Radio /
	Zoom / Size
	Smart / List
	Audio / Lang I/II
	Guide / EPG / -/--
	Sleep / Timer
	Text / Goto
	Exit / Cancel / Clear
	Menu / Home
	Display / Media
	Mute / Dimmer

Original	Sustituto
	CH+ / Page+
	CH- / Page-
	Up
	Down
	Right
	Left
	OK
	Vol+
	Vol-
	Back / Return
	>> / Preset+
	<< / Preset-
	Fav / Marker / PC
	1
	2
	3
	4





	Original	Sustituto	Original	Sustituto
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	Info	 Info / Angle		
	Pause	 Pause / Step / Freeze		





Original	Sustituto

Original	Sustituto






 










 



















 
Original	Sustituto
 Yellow / Subtitle	 Yellow / YouTube / Repeat
 Yellow / Subtitle	 Subtitle / EQ
 TV / AV	 AV / Input / RDS
 Green / P/N	 Green / APP / Repeat
 TV / Radio	 TV/Radio /
 SAT	 Shift + 0
 EPG	 Guide / EPG / -/--

Original	Sustituto





Original	Sustituto	
Mute		Mute / Dimmer
PWR On/Off		Power
App	 + 	Shift + Green / APP /
Epg		Guide / EPG / -/--
Info		Info / Angle
Subt.List		Subtitle / EQ
TV		TV/Radio /
Text		Text / Goto
Zoom		Zoom / Size
Menu		Menu / Home
TV/SAT		AV / Input / RDS
Menu Up		Up
Display		Display / Media
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear

Original	Sustituto	
Menu Down		Down
Back		Back / Return
Volume+		Vol+
CH/Page+		CH+ / Page+
Volume-		Vol-
CH/Page-		CH- / Page-
Audio		Audio / Lang I/II
1. ?		1
2abc		2
3def		3
4ghi		4
5jkl		5
6mno		6
7pqrm		7
8tuv		8
9wxyz		9
Guide Pilote	 + 	Shift + Guide / EPG / -/--
















































Original	Sustituto
0/10	HDMI - BAT 0
FAV Pref.	PC FAV MARKER Fav / Marker / PC
Red	NETFLIX SEARCH Red / Netflix / Search
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random
Dec/Pause	STEP - FREEZE Pause / Step / Freeze
	LIST SMART Smart / List
	TOP MENU D.MENU D.Menu / Top

Original	Sustituto





Original	Sustituto	Original	Sustituto
Power	 Power	Recall	 Back / Return
Mute	 Mute / Dimmer	Vol+	 Vol+
Pause	 Pause / Step / Freeze	List	 Smart / List
Audio	 Audio / Lang I/II	P+	 CH+ / Page+
Zoom	 Zoom / Size	Vol-	 Vol-
Timer	 Sleep / Timer	M/P	 Display / Media
Tv/Radio	 TV/Radio /	P-	 CH- / Page-
Text	 Text / Goto	1	 1
Tv/SAT	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Up/CH+	 Up	4	 4
Info	 Info / Angle	5	 5
Left	 Left	6	 6
OK	 OK	7	 7
Right	 Right	8	 8
Exit	 Exit / Cancel / Clear	9	 9
Down/CH-	 Down	EPG	 Guide / EPG / -/-

Original	Sustituto	Original	Sustituto
Power	 Power	Recall	 Back / Return
Mute	 Mute / Dimmer	Vol+	 Vol+
Pause	 Pause / Step / Freeze	List	 Smart / List
Audio	 Audio / Lang I/II	P+	 CH+ / Page+
Zoom	 Zoom / Size	Vol-	 Vol-
Timer	 Sleep / Timer	M/P	 Display / Media
Tv/Radio	 TV/Radio /	P-	 CH- / Page-
Text	 Text / Goto	1	 1
Tv/SAT	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Up/CH+	 Up	4	 4
Info	 Info / Angle	5	 5
Left	 Left	6	 6
OK	 OK	7	 7
Right	 Right	8	 8
Exit	 Exit / Cancel / Clear	9	 9
Down/CH-	 Down	EPG	 Guide / EPG / -/-





Original	Sustituto	Original	Sustituto
0/Sleeptimer	0		
FAV	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		

