 












 


 



 



 

















 

 









 
 


 













| Original   | Sustituto   | Original   | Sustituto   |
|--|---|--|---|
|  POWER    |  Power                   |  9 wxyz   |  9                       |
|  ←○       |  Shift + Smart / List    |  TV       |  TV/Radio /              |
|  **/0     |  Shift + Display / Media |  0        |  0                       |
|  **²/♀    |  Shift + Red / Netflix / |  ↔        |  Shift + Back / Return   |
|  SOURCE   |  AV / Input / RDS        |  TV GUIDE |  Guide / EPG / -/-       |
|  PRESETS  |  Smart / List            |  [≡]      |  Text / Goto             |
|  ≡        |  Setup / OPT /           |  MENU     |  Menu / Home             |
|  ≡        |  Display / Media         |  Q.MENU   |  D.Menu / Top            |
|  SLEEP    |  Sleep / Timer           |  UP       |  Up                      |
|  1 . /@   |  1                       |  LEFT     |  Left                    |
|  2 abc   |  2                      |  OK      |  OK                     |
|  3 def  |  3                     |  RIGHT  |  Right                 |
|  4 ghi  |  4                     |  DOWN   |  Down                  |
|  5 jkl  |  5                     |  BACK   |  Back / Return         |
|  6 mno  |  6                     |  →□←    |  Picture / Format      |
|  7 pqrs |  7                     |  EXIT   |  Exit / Cancel / Clear |
|  8 tuv  |  8                     |  *FAV   |  Fav / Marker / PC     |





| Original | Sustituto                 |
|----------|---------------------------|
| VOL+     | Vol+                      |
| MUTE     | Mute / Dimmer             |
| P+       | CH+ / Page+               |
| VOL-     | Vol-                      |
| INFO     | Info / Angle              |
| P-       | CH- / Page-               |
| REC      | Rec / Rec Mode            |
| PLAY     | Play / Slow               |
| PAUSE    | Pause / Step / Freeze     |
| STOP     | Stop / Hold               |
| LANG.    | Audio / Lang I/II         |
| <<<      | <<< / Tune-               |
| >>>      | >>> / Tune+               |
| [≡]...   | Sound / Title             |
| RED      | Red / Netflix / Search    |
| GREEN    | Green / APP / Repeat      |
| YELLOW   | Yellow / YouTube / Repeat |

| Original | Sustituto                   |
|----------|-----------------------------|
| BLUE     | Blue / Prime Video / Random |

