






 

 



 

 

 

 
 



 
 
 
 






 
 


 





Original	Sustituto
 Power	 Power
 Power Off	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 _/---/Del	 GUIDE Guide
 CH List	 LIST List
 Mute	 Mute
 Source	 AV AV
 Vol+	 Vol +

Original	Sustituto
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Home	 Smart
 Magicinfo Player 1	 Media
 Info	 Info
 Tools	 Options
 Exit	 Exit
 Return	 Back
 Enter	 Ok
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Red/PC	 Red
 Green/DVI	 Green





Original	Sustituto
Yellow/HDMI	Yellow
Blue/DP	Blue
Set IR Control	Format
Unset IR Control	3D
Lock	+ Shift + Stop
Stop	Stop
Play	Play
Pause	Pause
<</ <<	<<
>>/>>	>>

Original	Sustituto

