 

 





 



















 
















 

 


 
 






 








 

 

 

 



 





 

 

 





Original	Sustituto
 Power	 Power
 Tv/DTV	 TV/Radio /
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Pre-CH	 Back / Return
 Vol+	 Vol+
 PR+	 CH+ / Page+

Original	Sustituto
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 PR-	 CH- / Page-
 Guide	 Guide / EPG / -/--
 Menu	 Menu / Home
 CH.List	 Smart / List
 Tools	 Setup / OPT /
 Up	 Up
 Return	 Shift + Back / Return
 Left	 Left
 Enter	 OK
 Right	 Right
 Info	 Info / Angle
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





	Original	Sustituto	Original	Sustituto
	 Yellow	 Yellow / YouTube / Repeat		
	 Blue	 Blue / Prime Video / Random		
	 TTX/MIX	 Text / Goto		
	 P.Size	 Zoom / Size		
	 DMA	 Display / Media		
	 E.Mode	 D.Menu / Top		
	 3D	 Shift + 3		
	 Subt.	 Subtitle / EQ		
	 <<	 << / Tune-		
	 Pause	 Pause / Step / Freeze		
	 >>	 >> / Tune+		
	 Rec	 Rec / Rec Mode		
	 Play	 Play / Slow		
	 Stop	 Stop / Hold		

