

 

 

 

 

 





 
























 

 




Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Tv System	 D.Menu / Top
 Display	 Display / Media
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Zoom	 Zoom / Size
 Setup	 Setup / OPT /
 Goto	 Text / Goto
 Option	 Shift + Setup / OPT / Tools
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Sustituto
 8	 8
 9	 9
 Return	 Back / Return
 0	 0
 Home	 Menu / Home
 >>I	 >>I / Preset+
 Play	 Play / Slow
 Vol+	 Vol+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 Vol-	 Vol-
 Pause/Step	 Pause / Step / Freeze
 Repeat	 Shift + Green / APP /
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right





	Original	Sustituto
	Down	 Down
	<<	 << / Tune-
	>>	 >> / Tune+
	Red	 Red / Netflix / Search
	Green	 Green / APP / Repeat
	Blue	 Blue / Prime Video / Random
	Yellow	 Yellow / YouTube / Repeat

Original	Sustituto

