
























 










 

 

 

 

 


Original	Sustituto
 Power	 Power
 Power Tv	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/Radio	 TV/R
 Pre-CH	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute

Original	Sustituto
 CH+	 Ch +
 CH-	 Ch -
 CH List	 List
 Tv Portal	 Media
 Menu	 Menu
 EPG	 Guide
 Tools	 Options
 Info	 Info
 Return	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Red	 Red
 Green	 Green





Original	Sustituto	Original	Sustituto
 Yellow	 Yellow		
 Blue	 Blue		
 Text	 Text		
 Audio	 Dual		
 SUB	 Subt		
 Rec	 Rec		
 <<	 <<		
 Pause	 Pause		
 Play	 Play		
 Stop	 Stop		
 >>	 >>		

