



Original	Sustituto	Original	Sustituto
 Power	 Power	 9	 9
 Open/Close	 Eject	 0	 0
 Demo/Dimmer	 Media	 CD Ripping	 Guide
 On/Off Timer	 AV	 Cancel	 Pre Ch
 Timer/Clock	 Shift + AV	 I<<	 I<<
 DVD	 Blue	 Step	 3D
 Tuner	 Yellow	 Pause	 Pause
 Port	 Green	 >>I	 >>I
 AUX	 Red	 <<	 <<
 1	 1	 Stop	 Stop
 2	 2	 Play	 Play
 3	 3	 >>	 >>
 4	 4	 Vol+	 Vol +
 5	 5	 Vol-	 Vol -
 6	 6	 Mute	 Mute
 7	 7	 Audio	 Dual
 8	 8	 Tuning Up	 Ch +





Original	Sustituto	Original	Sustituto
Tuning Down	Ch -	Echo	Shift + TV/R
Menu	Menu	Sleep	Sleep
Info	Info	Slow	List
Return	Back	Angle	Options
Exit	Exit	Mic Vol+	Shift + Vol +
Up	Up	Mic Vol-	Shift + Vol -
Down	Down	Remain	Smart
Right	Right	Zoom	Shift + Eject
Left	Left	Mo/ST	Shift + Options
Enter	Ok		
Repeat	Text		
A-B Repeat	TV/R		
Tuner Memory	Rec		
Subtitle	Subt		
DSP/EQ	D. Menu		
P.Bass	Shift + Subt		
P.Sound	Format		

