


 













 











 

 









 



 











 
 








 

 













 
















 
 




Original	Sustituto	Original	Sustituto
 Power	 Power	 PC	 Media
 Source	 AV	 Mute	 Mute
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 P+	 Ch +
 4	 4	 P-	 Ch -
 5	 5	 Menu	 Menu
 6	 6	 Exit	 Exit
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 -/-	 Guide	 Enter	 Ok
 PRE-CH	 Pre Ch	 [≡+]/PIP	 3D
 TV	 TV/R	 [≡?]/Info	 Info
 CH.MGR	 Back	 [≡]/[/≡]/TTX/MIX	 Text
 Sleep	 Sleep	 Red-/I/I-/P.Mode	 Red

Original	Sustituto	Original	Sustituto
 PC	 Media	 Mute	 Mute
 Vol+	 Vol +	 Vol-	 Vol -
 P+	 Ch +	 P-	 Ch -
 Menu	 Menu	 Exit	 Exit
 Up	 Up	 Down	 Down
 Right	 Right	 Left	 Left
 Enter	 Ok	 [≡+]/PIP	 3D
 [≡?]/Info	 Info	 [≡]/[/≡]/TTX/MIX	 Text
 Red-/I/I-/P.Mode	 Red		





Original	Sustituto	Original	Sustituto
Green/II/I-/S. Mode	Green		
Yellow/Still	Yellow		
Blue/P.Size	Blue		
[≡♦]/Source	+ Shift + AV		
[≡◇]/Swap	Options		
Size	Format		
I-II/Dual	Dual		
(o)/SRS	Subt		
[←]/Position	Smart		
P Up	>>		
P Down	<<		

