




 








 

 

 




 













Original	Sustituto
 DVD	 Shift + 2
 VCR	 Shift + 4
 Input Sel.	 AV / Input / RDS
 Standby / On	 Power
 Open / Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Angle	 Shift + Info / Angle
 0	 0
 Audio	 Audio / Lang I/II

Original	Sustituto
 I<<	 I<< / Preset-
 F.ADV / Skip	 Fav / Marker / PC
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Play	 Play / Slow
 >>	 >> / Tune+
 PROG/TRK +	 CH+ / Page+
 PROG/TRK -	 CH- / Page-
 Menu	 Menu / Home
 Up	 Up
 Return	 Back / Return
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down





Original	Sustituto
 Title List / Disc Menu	 D.Menu / Top
 Info	 Info / Angle
 Playlist / Title Menu	 Smart / List
 Anykey	 Yellow / YouTube / Repeat
 Subtitle	 Subtitle / EQ
 TV / VCR	 Display / Media
 REC	 Rec / Rec Mode
 Rec Speed	 Setup / OPT /
 Cancel	 Exit / Cancel / Clear
 Timer Rec	 Sleep / Timer
 Copy To DVD	 Red / Netflix / Search
 Copy To VCR	 Green / APP / Repeat

Original	Sustituto





Original		Sustituto		Original		Sustituto	
	TV Standby/On		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Vol+		Vol+				
	TV Mute		Mute / Dimmer				
	Prog. +		CH+ / Page+				
	Vol-		Vol-				
	Prog. -		CH- / Page-				

