



Original	Sustituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Tv/Radio	TV/Radio /
0	0
←PR	Back / Return
Menu	Menu / Home
Info	Info / Angle
Page Up	CH+ / Page+

Original	Sustituto
Exit	Exit / Cancel / Clear
EPG	Guide / EPG / -/-
Page Down	CH- / Page-
Up/PR+	Up
Left	Left
Vol-	Vol-
OK/List	OK
Right	Right
Vol+	Vol+
FAV	Fav / Marker / PC
Down/PR-	Down
Pause	Pause / Step / Freeze
List	Smart / List
Tv/AV	AV / Input / RDS
UHF	Setup / OPT /
PAL/NTSC	Picture / Format
Audio	Audio / Lang I/II



