



Original	Sustituto
	 Power
	 Mute / Dimmer
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Smart / List
	 Text / Goto
	 Subtitle / EQ
	 Shift + Pause / Step / Freeze

Original	Sustituto
	 Info / Angle
	 Menu / Home
	 Up
	 AV / Input / RDS
	 Left
	 OK
	 Right
	 Down
	 Guide / EPG / -/-
	 Exit / Cancel / Clear
	 Vol+
	 Fav / Marker / PC
	 CH+ / Page+
	 Vol-
	 Rec / Rec Mode
	 CH- / Page-
	 1















	Original	Sustituto	Original	Sustituto
	2	DVD 2		
	3	CD - STB 3		
	4	VIDEO 4		
	5	TAPE 5		
	6	TUNER 6		
	7	AUX - HDD 7		
	8	USB 8		
	9	BLUETOOTH 9		
	AUDIO	LANG I/II AUDIO		
	0	HDMI - SAT 0		
	RECALL	RETURN BACK		





Original	Sustituto	Original	Sustituto
Power	 Power	TXT/MIX	 Text / Goto
Mute	 Mute / Dimmer	Menu	 Menu / Home
Play	 Play / Slow	Up	 Up
Pause	 Pause / Step / Freeze	Info	 Info / Angle
Stop	 Stop / Hold	Left	 Left
Rec	 Rec / Rec Mode	Enter	 OK
<</Hold	 << / Tune-	Right	 Right
>>/Index	 >> / Tune+	Cancel	 Exit / Cancel / Clear
I<<	 I<< / Preset-	Down	 Down
>>I	 >>I / Preset+	Back	 Back / Return
Nicam/A2	 Audio / Lang I/II	Vol+	 Vol+
Subtitle	 Subtitle / EQ	List	 Smart / List
Subpage	 Eject / Surround	CH+	 CH+ / Page+
Size	 Zoom / Size	Vol-	 Vol-
Sleep	 Sleep / Timer	Mode	 Display / Media
DTV/Radio	 TV/Radio /	CH-	 CH- / Page-
Reveal	 D.Menu / Top	1	 1

Original	Sustituto	Original	Sustituto
Power	 Power	TXT/MIX	 Text / Goto
Mute	 Mute / Dimmer	Menu	 Menu / Home
Play	 Play / Slow	Up	 Up
Pause	 Pause / Step / Freeze	Info	 Info / Angle
Stop	 Stop / Hold	Left	 Left
Rec	 Rec / Rec Mode	Enter	 OK
<</Hold	 << / Tune-	Right	 Right
>>/Index	 >> / Tune+	Cancel	 Exit / Cancel / Clear
I<<	 I<< / Preset-	Down	 Down
>>I	 >>I / Preset+	Back	 Back / Return
Nicam/A2	 Audio / Lang I/II	Vol+	 Vol+
Subtitle	 Subtitle / EQ	List	 Smart / List
Subpage	 Eject / Surround	CH+	 CH+ / Page+
Size	 Zoom / Size	Vol-	 Vol-
Sleep	 Sleep / Timer	Mode	 Display / Media
DTV/Radio	 TV/Radio /	CH-	 CH- / Page-
Reveal	 D.Menu / Top	1	 1







































Original	Sustituto	
2	DVD 2	2
3	CD - STB 3	3
4	VIDEO 4	4
5	TAPE 5	5
6	TUNER 6	6
7	AUX - HDD 7	7
8	USB 8	8
9	BLUETOOTH 9	9
EPG	GUIDE EPG	Guide / EPG / -/--
0	HDMI - SAT 0	0
FAV	PC FAV MARKER	Fav / Marker / PC
Red	NETFLIX SEARCH	Red / Netflix / Search
Green	APP REPEAT	Green / APP / Repeat
Yellow	YouTube REPEAT A-B	Yellow / YouTube / Repeat
Blue	Prime Video RANDOM	Blue / Prime Video / Random
<</Hold	SHIFT + HOLD	Shift + Stop /
FAV-	SHIFT +	Shift + Left

Original	Sustituto	
FAV+	SHIFT +	Shift + Right
-/--	SHIFT +	Shift + Guide / EPG / -/--





Original	Sustituto	Original	Sustituto
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4

Original	Sustituto	Original	Sustituto
Power	 Power	Up	 Up
Mute	 Mute / Dimmer	Info	 Info / Angle
Play	 Play / Slow	Left	 Left
Pause	 Pause / Step / Freeze	Ok	 OK
Stop	 Stop / Hold	Right	 Right
Rec	 Rec / Rec Mode	Exit	 Exit / Cancel / Clear
<</[Timer]	 << / Tune-	Down	 Down
>>/[≡?]	 >> / Tune+	Recall	 Back / Return
I<</[≡⇅]	 I<< / Preset-	Vol+	 Vol+
>>I/[≡...]	 >>I / Preset+	[≡i]	 Smart / List
Audio	 Audio / Lang I/II	Ch+	 CH+ / Page+
Subtitle	 Subtitle / EQ	Vol-	 Vol-
I<</[≡⇅]	 Zoom / Size	Ch-	 CH- / Page-
<</[Timer]	 Sleep / Timer	1	 1
Text	 Text / Goto	2	 2
Source/Av	 AV / Input / RDS	3	 3
[II]	 Menu / Home	4	 4





Original	Sustituto	Original	Sustituto
5	TAPE 5		
6	TUNER 6		
7	AUX - HDD 7		
8	USB 8		
9	BLUETOOTH 9		
Epg	GUIDE EPG		
0	HDMI - SAT 0		
Fav	PC FAV MARKER		
Red	NETFLIX SEARCH		
Green	APP REPEAT		
Yellow	YouTube REPEAT A-B		
Blue	Prime Video RANDOM		
Freeze	SHIFT + STEP - FREEZE		

