


 





 

 
 

 


 
 


 
 


 
 

 

 
 
 



 

 







 












 




 







 


 
 
 








 

 

 
 


 
 






Original	Sustituto
 Power Tv	 Power
 NET	 Media
 [i+]	 Info
 FAV	 Shift + Pre Ch
 ATV	 Smart
 DTV	 D. Menu
 SAT	 Shift + Media
 Radio	 TV/R
 Power Source	 Shift + Power
 << Source	 Shift + <<
 Play Source	 Play
 >> Source	 Shift + >>
 USB Rec	 Shift + Rec
 Rec Source	 Rec
 Rec Stop	 Shift + Stop
 Stop Source	 Stop
 Ready/Time Shift	 Options

Original	Sustituto
 ←	 Shift + Left
 →	 Shift + Right
 Pause	 Pause
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 Source	 AV
 I/II/I+II/▼/O	 Dual
 [<>]	 Format





Original	Sustituto	Original	Sustituto
 AV Mode	 Shift + AV	 OK	 Ok
 Eco	 Shift + 3D		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Mute	 Mute		
 P+	 Ch +		
 P-	 Ch -		
 [=]	 Text	 [...] AD	 Subt
 3D	 3D	 [≡?]	 List
 End	 Exit	 [≡o]	 Sleep
 EPG	 Guide	 [≡+]	 Eject
 Back	 Back	 R	 Red
 Menu	 Menu	 G	 Green
 Up	 Up	 Y	 Yellow
 Down	 Down	 B	 Blue
 Right	 Right		
 Left	 Left		

