



Original	Sustituto	Original	Sustituto
Standby	Power	NICAM	Shift + Audio / Lang I/II
Open/Close /	Eject / Surround	CH +	CH+ / Page+
MUTE	Mute / Dimmer	VOL -	Vol-
1	1	DISPLAY	Display / Media
2	2	CH -	CH- / Page-
3	3	Up	Up
4	4	Left	Left
5	5	OK	OK
6	6	Right	Right
7	7	LCD MENU	Shift + Menu /
8	8	Down	Down
9	9	EXIT	Exit / Cancel / Clear
-/--	Shift + Guide / EPG / -/--	INPUT	AV / Input / RDS
0	0	P.MODE	Picture / Format
RECALL	Back / Return	S.MODE	Sound / Title
VOL +	Vol+	SLEEP	Sleep / Timer
ASPECT	Shift + Picture / Format	FAV	Fav / Marker / PC





Original	Sustituto
FAV -	Shift + CH- /
FAV +	Shift + CH+ /
EPG	Guide / EPG / -/--
TEXT	Text / Goto
HOLD	Shift + Stop /
Subtitle	Subtitle / EQ
TV/RADIO	TV/Radio /
INDEX / D.DISP	Menu / Home
SIZE / ZOOM	Zoom / Size
REVEAL/ANGLE	Info / Angle
TITLE / Subpage	Shift + Sound / Title
D.MENU	D.Menu / Top
Audio	Audio / Lang I/II
Goto	Shift + Text /
Setup	Setup / OPT /
MEDIA	Shift + Display / Media
PLAY/PAUSE	Play / Slow

Original	Sustituto
PLAY/PAUSE	Shift + Play /
<<	<< / Tune-
>>	>> / Tune+
REC	Rec / Rec Mode
STOP	Stop / Hold
I<<	I<< / Preset-
>>I	>>I / Preset+
RED / Prog	Red / Netflix / Search
GREEN / Intro	Green / APP / Repeat
YELLOW /	Yellow / YouTube / Repeat
YELLOW /	Shift + Yellow / YouTube /
BLUE / A-B	Blue / Prime Video / Random

