









| Original | Sustituto |
|---|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  DTV/ATV |  D.Menu / Top |
|  Recall |  Back / Return |
|  P.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |
|  Sleep |  Sleep / Timer |

| Original | Sustituto |
|--|---|
|  Menu |  Menu / Home |
|  Source |  AV / Input / RDS |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Display |  Display / Media |
|  Vol+ |  Vol+ |
|  Vol- |  Vol- |
|  MTS |  Info / Angle |
|  Rec List |  Smart / List |
|  CH+ |  CH+ / Page+ |
|  CH- |  CH- / Page- |
|  FAV/List |  Fav / Marker / PC |
|  Rec |  Rec / Rec Mode |





 




 
| Original | Sustituto |
|--|---|
|  Freeze |  Pause / Step / Freeze |
|  Guide |  Guide / EPG / -/- |
|  << |  << / Tune- |
|  >> / Aspect |  >> / Tune+ |
|  >> / Aspect |  Shift + Picture / Format |
|  << / Cancel |  << / Preset- |
|  << / Cancel |  Shift + Exit / Cancel / Clear |
|  >> / Sub.PG |  >> / Preset+ |
|  Stop / Index |  Stop / Hold |
|  Play/Pause / Timeshift |  Play / Slow |
|  Tv/Radio |  TV/Radio / |
|  Subtitle |  Subtitle / EQ |
|  Reveal |  Eject / Surround |
|  Size |  Zoom / Size |
|  Hold |  Shift + Stop / |
|  Text |  Text / Goto |
|  Red |  Red / Netflix / Search |

| Original | Sustituto |
|--|---|
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Cyan |  Blue / Prime Video / Random |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | Sustituto |
|---|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  DTV/ATV |  D.Menu / Top |
|  Recall |  Back / Return |
|  P.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |
|  Sleep |  Sleep / Timer |

| Original | Sustituto |
|--|---|
|  Menu |  Menu / Home |
|  Source |  AV / Input / RDS |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Display |  Display / Media |
|  Vol+ |  Vol+ |
|  Vol- |  Vol- |
|  MTS |  Info / Angle |
|  Rec List |  Smart / List |
|  CH+ |  CH+ / Page+ |
|  CH- |  CH- / Page- |
|  FAV/List |  Fav / Marker / PC |
|  Rec |  Rec / Rec Mode |





| Original | Sustituto |
|------------------------|-------------------------------|
| Freeze | Pause / Step / Freeze |
| Guide | Guide / EPG / -/- |
| << | << / Tune- |
| >> / Aspect | >> / Tune+ |
| >> / Aspect | Shift + Picture / Format |
| << / Cancel | << / Preset- |
| << / Cancel | Shift + Exit / Cancel / Clear |
| >> / Sub.PG | >> / Preset+ |
| Stop / Index | Stop / Hold |
| Play/Pause / Timeshift | Play / Slow |
| Tv/Radio | TV/Radio / |
| Subtitle | Subtitle / EQ |
| Reveal | Eject / Surround |
| Size | Zoom / Size |
| Hold | Shift + Stop / |
| Text | Text / Goto |
| Red | Red / Netflix / Search |

| Original | Sustituto |
|----------|-----------------------------|
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Cyan | Blue / Prime Video / Random |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

