



 




 


Original	Sustituto
 Source	 AV / Input / RDS
 Power	 Power
 Theatre	 TV/Radio /
 <</<	 << / Tune-
 Play	 Play / Slow
 >>/ >	 >> / Tune+
 Sync Menu	 D.Menu / Top
 <<	 << / Preset-
 Stop	 Stop / Hold
 >>	 >> / Preset+
 ?/i-Manual	 Shift + Info / Angle
 Scene	 Picture / Format
 [+]	 Smart / List
 Digital/Analog	 Display / Media
 ♥	 Fav / Marker / PC
 Guide	 Guide / EPG / -/--
 Up	 Up

Original	Sustituto
 [i+]/[?]	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Options	 Setup / OPT /
 Home	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





	Original	Sustituto	Original	Sustituto
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	[≡]/Text	 Text / Goto		
	0	 0		
	[...]	 Subtitle / EQ		
	Vol+	 Vol+		
	PR+	 CH+ / Page+		
	Mute	 Mute / Dimmer		
	Audio	 Audio / Lang I/II		
	Vol-	 Vol-		
	PR-	 CH- / Page-		

