






 


 

 


 

 

 




 

 

 

 

 
 

 

 





 
 

 

 

 

 

 

 

 



 

 

 

 

 

 

 



 

 




 

 

 


 

 


 

 

 

 

 



Original	Sustituto
	 Eject / Surround
	 +  Shift + Power
	 Power
	 +  Shift + Sound / Title
	 AV / Input / RDS
	 +  Shift + Mute / Dimmer
	 Green / APP / Repeat
	 TV/Radio /
	 Exit / Cancel / Clear
	 +  Shift + D.Menu / Top Menu
	 Sleep / Timer
	 Mute / Dimmer
	 Play / Slow
	 1
	 +  Shift + 1
	 2
	 +  Shift + 2

Original	Sustituto
	 3
	 +  Shift + 3
	 +  Shift + Setup / OPT / Tools
	 Audio / Lang I/II
	 4
	 +  Shift + 4
	 5
	 +  Shift + 5
	 6
	 +  Shift + 6
	 Picture / Format
	 Info / Angle
	 7
	 +  Shift + 7
	 8
	 +  Shift + 8
	 9





Original	Sustituto
 9 TV	 Shift + 9
 Sound Field	 Sound / Title
 Subtitle	 Subtitle / EQ
 >10	 Guide / EPG / -/--
 >10 TV	 Fav / Marker / PC
 0/10	 0
 0/10 TV	 Shift + 0
 Enter	 Shift + OK
 Display	 Display / Media
 Vol+	 Vol+
 Vol+ Tv	 Shift + Vol+
 Vol-	 Vol-
 Vol- Tv	 Shift + Vol-
 I<<	 I<< / Preset-
 I<< TV	 Shift + I<< / Preset-
 >>I	 >>I / Preset+
 >>I TV	 Shift + >>I / Preset+

Original	Sustituto
 <<	 << / Tune-
 >>	 >> / Tune+
 Play/Select	 Shift + Play /
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 DVD Display	 Shift + Display / Media
 DVD Top Menu	 Menu / Home
 Up	 Up
 DVD Menu	 D.Menu / Top
 Return	 Back / Return
 Left	 Left
 OK	 OK
 Enter TV	 Shift + Down
 Right	 Right
 DVD Setup	 Setup / OPT /
 AMP Menu	 Shift + Menu /
 Down	 Down

