






 










 

 



 





 

























 

 

 

 







Original	Sustituto
 Power	 Power
 [+]	 Picture / Format
 [i+]	 Info / Angle
<</<l button" data-bbox="231 282 261 322"/> <</<l	 << / Tune-
 Play Bravia Sync	 Play / Slow
 Pause Bravia	 Pause / Step / Freeze
>>/l> button" data-bbox="231 423 261 463"/> >>/l>	 >> / Tune+
 Sync Menu Bravia Sync	 D.Menu / Top
 Stop Bravia Sync	 Stop / Hold
 Theatre Bravia	 TV/Radio /
 Digital	 Display / Media
 Analog	 Smart / List
 [...]	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Guide	 Guide / EPG / -/--
 Source	 AV / Input / RDS
 Return	 Back / Return

Original	Sustituto
 Options	 Setup / OPT /
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Home	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original	Sustituto	Original	Sustituto
7	7		
8	8		
9	9		
0	0		
Text	Text / Goto		
FAV	Shift + Fav / Marker / PC		
Vol+	Vol+		
Vol-	Vol-		
Mute	Mute / Dimmer		
Prog+	CH+ / Page+		
Prog-	CH- / Page-		
Back	Fav / Marker / PC		

