

 
 
 
 


 


 
 






 

 

 







 









 



 

 
 
 
 
 

 
 
 








Original	Sustituto	Original	Sustituto
 Power	 Power	 Red	 Red
 1	 1	 Green	 Green
 2	 2	 Yellow	 Yellow
 3	 3	 Blue	 Blue
 4	 4	 Guide	 Guide
 5	 5	 Rec List	 List
 6	 6	 Input	 AV
 7	 7	 *	 Menu
 8	 8	 Up	 Up
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 [i+]	 DISPLAY Info	 Left	 Left
 [≡]	 REPEAT Text	 OK	 Ok
 Google Play	 SHIFT + APP Media	 Back	 Back
 Netflix	 APP Media	 TV	 TV/R

No funciÃ³n de control de voz.





Original	Sustituto	Original	Sustituto
	Home		Smart
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	Recall		Pre Ch
	Mute		Mute
	CH+		Ch +
	CH-		Ch -
	Audio		Dual
	Help		Subt
	Help		D. Menu
	<<		<<
	Play		Play
	>>		>>
	Rec		Rec
	Pause		Pause

No funci3n de control de voz.

