



Original	Sustituto
Sleep	Sleep / Timer
Standby AV	Shift + Power
System Standby	Power
Video1	Shift + 4
Video 2	Shift + 1
DVD	Shift + 2
MD/Tape	Shift + 5
CD	Shift + 3
Tuner	Shift + 6
Top Menu	Shift + D.Menu / Top Menu
1 Tuner	1
Up	Up
2 Tuner	2
DVD Menu	D.Menu / Top
3 Tuner	3
Left	Left
4 Tuner	4

Original	Sustituto
Enter	OK
5 Tuner	5
Right	Right
6 Tuner	6
7 Tuner	7
Down	Down
8 Tuner	8
Recall	Fav / Marker / PC
9 Tuner	9
>10 Tuner/Shift/-/-	Guide / EPG / -/-
0 Tuner	0
Enter/D.Tuning/Return Tuner	Back / Return
I<</CH/Preset-	I<< / Preset-
I<</CH Preset- Tuner	Shift + I<< / Preset-
>>I/CH/Preset+	>>I / Preset+
>>I/CH Preset+ Tuner	Shift + >>I / Preset+
Tv/Video/ANT	AV / Input / RDS







Original	Sustituto
 Standby	 Power
 Video 1	 Shift + 4
 Video 2	 Shift + 1
 DVD	 Shift + 2
 MD/Tape	 Shift + 5
 CD	 Shift + 3
 Tuner	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 >10/Shift/-/-	 Guide / EPG / -/-

Original	Sustituto
 0	 0
 Enter/D.Tuning/Return	 Back / Return
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 D.Skip/TV/VTR	 TV/Radio /
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Muting	 Mute / Dimmer
 Master Vol+	 Vol+
 Master Vol-	 Vol-





Original	Sustituto
Standby CD	Power
Standby Video	+  Shift + Power
Video 1	Smart / List
Video 2	Display / Media
DVD	Blue / Prime Video / Random
MD/Tape	Green / APP / Repeat
CD	Yellow / YouTube / Repeat
Tuner	Red / Netflix / Search
1 CD	1
1 Video 1	+  Shift + 1
2 CD	2
2 Video 1	+  Shift + 2
3 CD	3
3 Video 1	+  Shift + 3
4 CD	4
4 Video 1	+  Shift + 4
5 CD	5

Original	Sustituto
5 Video 1	+  Shift + 5
6 CD	6
6 Video 1	+  Shift + 6
7 CD	7
7 Video 1	+  Shift + 7
8 CD	8
8 Video 1	+  Shift + 8
9 CD	9
9 Video 1	+  Shift + 9
>10/Shift/-/ CD	Guide / EPG / -/ -
>10/Shift/-/ Video 1	+  Shift + Guide / EPG / -/ -
0 CD	0
0 Video 1	+  Shift + 0
Enter/D.Tuning/Return CD	Back / Return
Enter/D.Tuning/Return Video 1	+  Shift + Back / Return
I<< CD	I<< / Preset-
I<< Video 1	+  Shift + I<< / Preset-







Original	Sustituto
Standby	Power
Standby Video	+  Shift + Power
Video 1	Smart / List
Video 2	Display / Media
DVD	Blue / Prime Video / Random
MD/Tape	Green / APP / Repeat
CD	Yellow / YouTube / Repeat
Tuner	Red / Netflix / Search
1 MD/Tape	1
1 Video 2	+  Shift + 1
2 MD/Tape	2
2 Video 2	+  Shift + 2
3 MD/Tape	3
3 Video 2	+  Shift + 3
4 MD/Tape	4
4 Video 2	+  Shift + 4
5 MD/Tape	5

Original	Sustituto
5 Video 2	+  Shift + 5
6 MD/Tape	6
6 Video 2	+  Shift + 6
7 MD/Tape	7
7 Video 2	+  Shift + 7
8 MD/Tape	8
8 Video 2	+  Shift + 8
9 MD/Tape	9
9 Video 2	+  Shift + 9
>10/Shift/-/- MD/Tape	Guide / EPG / -/-
>10/Shift/-/- Video 2	+  Shift + Guide / EPG / -/-
0 MD/Tape	0
0 Video 2	+  Shift + 0
Enter/D.Tuning/Return MD/Tape	Back / Return
Enter/D.Tuning/Return Video 2	+  Shift + Back / Return
I<< MD/Tape	I<< / Preset-
I<< Video 2	+  Shift + I<< / Preset-



