





 

















 



 









Original	Sustituto
 Sleep	 Sleep / Timer
 Power	 Power
 VIDEO 1	 Shift + 4
 DVD/LD	 Shift + 2
 VIDEO 2	 Shift + 9
 TV / SAT	 Shift + 1
 VIDEO 3	 Shift + Guide / EPG / -/-
 TV / SAT	 Shift + 0
 AUX	 Shift + 7
 PHONO	 Shift + 8
 CD/SACD	 Shift + 3
 MD/TAPE	 Shift + 5
 TUNER	 Shift + 6
 1	 1
 2	 2
 3	 3
 4	 4

Original	Sustituto
 5	 5
 Enter 2	 Shift + OK
 6	 6
 7	 7
 8	 8
 9	 9
 >10	 Guide / EPG / -/-
 0	 0
 Enter	 OK
 D.Tuning	 Smart / List
 D.Skip/CH/Preset	 CH+ / Page+
 D.Skip/CH/Preset -	 CH- / Page-
 Display	 Display / Media
 A.F.D.	 Red / Netflix / Search
 2CH / Off	 Green / APP / Repeat
 MULTI CH / 2CH DIRECT	 Info / Angle
 Mode-	 << / Tune-





Original	Sustituto	Original	Sustituto
	Mode+		>> / Tune+
	Muting		Mute / Dimmer
	Test Tone		Text / Goto
	Main Menu		Menu / Home
	Master Vol+		Vol+
	Menu Left		Left
	Menu Right		Right
	+		Blue / Prime Video / Random
	Master Vol-		Vol-
	-		Yellow / YouTube / Repeat

