

 









	Original	Sustituto		Sustituto
	Tv/Video		TV/Radio /	
	Power		Power	
	1		1	
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	-/--		Guide / EPG / -/--	
	10/0		0	
	Enter		OK	
	Vol+		Vol+	
	Vol-		Vol-	
	CH-		CH- / Page-	

	Original	Sustituto	
	CH+		CH+ / Page+





Original	Sustituto
Sleep	Sleep / Timer
Timer Menu	Shift + Sleep / Timer
Theatre Sync	Red / Netflix / Search
Power	Power
Display	Display / Media
Time/Text	Text / Goto
Dimmer	Mute / Dimmer
Function+	CH+ / Page+
Key Control b	Smart / List
Key Control #	Shift + Smart / List
Score	Setup / OPT /
Function-	CH- / Page-
Karaoke Mode	Sound / Title
Karaoke Pon	Yellow / YouTube / Repeat
Repeat/FM	Green / APP / Repeat
Picture Navi	Picture / Format
1	1

Original	Sustituto
2	2
3	3
Audio	Audio / Lang I/II
4	4
5	5
6	6
Subtitle	Subtitle / EQ
7	7
8	8
9	9
Angle	Info / Angle
Clear	Exit / Cancel / Clear
0	0
Folder-	Shift + CH- /
Folder+	Shift + CH+ /
DVD Top Menu	D.Menu / Top
DVD/USB/Tuner	Menu / Home





Original	Sustituto
EQ	Shift + Subtitle / EQ
Up	Up
Left	Left
Enter	OK
Right	Right
Volume+	Vol+
Down	Down
Display/[*]	Shift + Display / Media
Volume-	Vol-
Return	Back / Return
I<</Preset-	I<< / Preset-
←/Replay/<I Step	Shift + Left
→/Advance/Step II>	Shift + Right
>>I/Preset+	>>I / Preset+
<</Tuning -/<I	<< / Tune-
Play	Play / Slow
>>/Tuning	>> / Tune+

Original	Sustituto
Pause	Pause / Step / Freeze
Stop	Stop / Hold



+/Slow I>