


 
 
 
 
 
 



 


 
 

 



 


 
 
 

 


 

 
 
 
 

 
 
 




Original		Sustituto		Original		Sustituto	
	Standby		Power		Vol-		Vol -
	Auto		Smart		CH+		Ch +
	Tv/Radio		TV/R		CH-		Ch -
	Mute		Mute		Nicam/A2		Options
	1		1		Aspect		3D
	2		2		Display		Info
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		OK		Ok
	8		8		Menu		Menu
	9		9		Exit		Exit
	0		0		Source		AV
	-/--		Shift + Guide		P.Mode		Shift + Format
	Back		Back		S.Mode		Shift + Dual
	Vol+		Vol +		Sleep		Sleep





Original	Sustituto
Fav	Pre Ch
Fav-	Shift + Ch -
Fav+	Shift + Ch +
Hold	Shift + AV
EPG	Guide
Text	Text
Lang	Dual
Subtitle	Subt
Index	List
Reveal	Eject
Subpage	D. Menu
Media	Media
Size	Format
Play	Play
Pause	Pause
<<	<<
>>	>>

Original	Sustituto
Rec	Rec
Stop	Stop
I<<	I<<
>>I	>>I
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue

