 

 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 


 





 

 
 
 

 




 






 
 
 
 
 
 
 
 

 

 

 
 




| Original   | Sustituto  |
|--|--|
|  Power      |  Power                        |
|  Eject/Auto |  Eject                        |
|  Mute       |  Mute                         |
|  1          |  1                            |
|  2          |  2                            |
|  3          |  3                            |
|  4          |  4                            |
|  5          |  5                            |
|  6          |  6                            |
|  7          |  7                            |
|  8         |  8                           |
|  9        |  9                          |
|  0        |  0                          |
|  -/--     |  SHIFT + -/-- Shift + Guide |
|  Recall   |  FAV PRE-CH Pre Ch          |
|  Vol+     |  + VOL Vol +                |
|  Vol-     |  - VOL Vol -                |

| Original   | Sustituto   |
|--|---|
|  Aspect           |  PICTURE FORMAT Format                   |
|  Audio            |  SOUND DUAL Dual                         |
|  CH+              |  + CH Ch +                               |
|  CH-              |  - CH Ch -                               |
|  Display          |  DISPLAY INFO Info                       |
|  Up               |  Up                                      |
|  Right            |  Right                                   |
|  Down             |  Down                                    |
|  Left             |  Left                                    |
|  OK               |  OK Ok                                   |
|  LCD Menu        |  TOP MENU MENU Menu                     |
|  DVD Setup/Exit |  CLEAR EXIT Exit                       |
|  DVD Setup/Exit |  SETTINGS OPT Options                  |
|  Input          |  TIMER AV AV                           |
|  P.Mode         |  SHIFT + PICTURE FORMAT Shift + Format |
|  S.Mode         |  SHIFT + SOUND DUAL Shift + Dual       |
|  Sleep          |  PROG SLEEP Sleep                      |





| Original | Sustituto      |
|----------|----------------|
|          | Shift + Pre Ch |
|          | Shift + Ch -   |
|          | Shift + Ch +   |
|          | Guide          |
|          | Text           |
|          | Shift + Eject  |
|          | TV/R           |
|          | 3D             |
|          | List           |
|          | Subt           |
|          | Smart          |
|          | D. Menu        |
|          | Media          |
|          | Play           |
|          |                |
|          | Pause          |
|          |                |

| Original | Sustituto |
|----------|-----------|
|          | Rec       |
|          | Stop      |
|          | I<<       |
|          | >>I       |
|          | Red       |
|          | Green     |
|          | Yellow    |
|          | Blue      |

