













 















 













 












 
 

Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Text	 Text / Goto
 0	 0
 Recall	 Back / Return
 Imagen	 Picture / Format
 Sonido	 Sound / Title
 Audio	 Audio / Lang I/II

Original	Sustituto
 Sleep	 Sleep / Timer
 Fuente	 Shift + Subtitle / EQ
 P+	 CH+ / Page+
 Vol+	 Vol+
 Info	 Info / Angle
 P-	 CH- / Page-
 Vol-	 Vol-
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down





Original	Sustituto	Original	Sustituto
 SALIR	Salir	 CLEAR EXIT CANCEL	Exit / Cancel / Clear
 SUBTITULO	Subtitulo	 EQ SUBTITLE	Subtitle / EQ
 INDICE	Indice	 TOP MENU D.MENU	D.Menu / Top
 TAMAÑO	Tamaño	 SIZE ZOOM	Zoom / Size
 MOSTRAR	Mostrar	 RDS AV INPUT	AV / Input / RDS
 MEZCLAR	Mezclar	 OPT-TOOLS SETUP	Setup / OPT /
 CONGELAR	Play	 SLOW	Play / Slow
 CONGELAR	Pause/Congelar	 STEP-FREEZE	Pause / Step / Freeze
 CANCELAR	I<</Cancelar	 PRESET-	I<< / Preset-
 SUBPÁG	>>I/Subpag	 PRESET+	>>I / Preset+
 GUÍA	Guía	 SHIFT + HOME MENU	Shift + Menu /
 FAV	FAV	 PC FAV MARKER	Fav / Marker / PC
 FAV	Stop	 HOLD	Stop / Hold
 FAV-	<</FAV-	 TUNE-	<< / Tune-
 FAV+	>>/FAV+	 TUNE+	>> / Tune+
 USB	USB	 SHIFT + 8	Shift + 8
 GRABAR	Grabar	 REC MODE	Rec / Rec Mode

Original	Sustituto	Original	Sustituto
 TIMESHIFT	Timeshift	 SHIFT + TIMER SLEEP	Shift + Sleep / Timer
 TV/RADIO	Tv/Radio	 PROGRAM TV/ RADIO	TV/Radio /

