

























































 











Original	Sustituto
Power	Power
Open / Close	Eject / Surround
OSD	Display / Media
1	1
2	2
3	3
Subtitle	Subtitle / EQ
4	4
5	5
6	6
Angle	Info / Angle
7	7
8	8
9	9
Language	Audio / Lang I/II
R/L	Blue / Prime Video / Random
0	0

Original	Sustituto
10+	Guide / EPG / -/--
Setup	Setup / OPT /
Mute	Mute / Dimmer
Clear	Exit / Cancel / Clear
Prog	TV/Radio /
Time	Sleep / Timer
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Title	Sound / Title
Menu	Menu / Home
Default	AV / Input / RDS
<<	<< / Tune-
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze







































Original	Sustituto	Original	Sustituto
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	C/CH	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	Pbc	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Resume	 Smart / List
Np	 Sleep / Timer	Slow Up	 CH+ / Page+

Original	Sustituto	Original	Sustituto
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	C/CH	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	Pbc	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Resume	 Smart / List
Np	 Sleep / Timer	Slow Up	 CH+ / Page+





Original	Sustituto	Original	Sustituto
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	Resume	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Lang	 Audio / Lang I/II	Clear/00:00	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Mode	 Smart / List
Pbc	 Sleep / Timer	Slow Up	 CH+ / Page+



